

ITCOOL®

ZEROVAC
VAKUM SISTEMLERİ

Vacuum Pump

Operating Manual

Please read the operating manual
carefully before using.



Vacuum Pump

I. Pump components



II. Operating Manu

1. Before operating

All motors are designed for operating voltages plus or minus 10% of the normal rating. Single voltage motors are supplied fully connected and ready to operate.

(a) Check the voltage and frequency at the outlet and ensure it matches the specifications on the pump motor metal plate. Ensure that the ON-OFF switch is in the OFF position before connecting the pump to a power source. Remove and discard the exhaust plug from the exhaust fitting.

(b) Fill the oil reservoir with oil before activate the pump. Remove the Oil Fill cap and add oil until oil show at the bottom of the sight glass. Refer to technical data in manual for the correct oil capacity of pump.

Vacuum Pump

(c) Place back the Oil Fill cap and remove the cap from the inlet fitting. Turn the motor switch to ON position. Place back the cap on the inlet fitting when the pump runs smoothly. This may take 2 to 30 seconds depending on the ambient temperature. After the pump operates for approximately one minute, check the sight glass for proper oil level, which should be aligned with the sight glass Oil Level line. Refill oil if necessary.

Note: The oil level should be aligned with the indicating line on the sight glass when the pump is running. Insufficient oil filled will result in poor vacuum performance. Excessive oil can result in overflowing of oil from the exhaust fitting. **To reduce the risk of injury, when applying to the R32 and HFO-1234yf, please be sure to operate the pump at cool and ventilated place.**

2. To shut off pump after use

To prolong pump lifespan and smooth start-up, these procedures to shut off pump should be followed.

- (a) Turn off the manifold valve between the pump and the system.
- (b) Remove the hose from the pump inlet.
- (c) Cover the inlet port openings to prevent any contamination or foreign particles from entering the port.

III. Maintenance

1. Vacuum pump oil:

The condition and type of oil used in any high performance vacuum pump are extremely important in determining the ultimate attainable vacuum. It is recommended to use the High Performance Vacuum Pump Oil, which is specifically blended to maintain maximum viscosity at normal running temperatures and to improve cold weather start up.

Vacuum Pump

2. Oil Change Procedure

(a) Ensure the pump is warmed up.

(b) Remove the Oil Drain cap. Drain off contaminated oil into a container and dispose it properly. Oil can be removed from the pump by opening the inlet and partially blocking the exhaust with a cloth while the pump is running. Do not operate the pump for more than 20 seconds using this method.

(c) When the drainage of oil completed, tilt the pump forward to remove the residual oil.

(d) Place back the Oil Drain cap. Remove the Oil Fill cap and fill the oil reservoir with new vacuum pump oil until the oil level is seen at the bottom of the sight glass.

(e) Ensure that the inlet ports are covered before turn on the pump. Allow it to run for one minute to check the oil level. If the oil level is below the sight glass Oil Level line, fill oil slowly (with the pump running) until the oil reaches the Oil Level line. Place back the Oil Fill cap, ensure the inlet is covered and the oil drain cap is closed tightly.

(f) i) If the oil is badly contaminated with sludge that forms during operation, you may need to remove the oil reservoir cover and wipe it.

ii) The alternative method to deal with heavily contaminated oil is to force the oil from the pump reservoir. Leave the pump to run until it is warmed up. While the pump is still running, remove the oil drain cap and restrict the exhaust slightly. This will back-pressure the oil reservoir and purge the oil with contaminants. Turn off the pump when oil stop flowing.

iii) Repeat this procedure as required until the contaminants is removed completely.

Vacuum Pump

iv) Replace the Oil Drain cap and refill the oil reservoir to the proper oil level with clean vacuum pump oil.

IV. Troubleshooting Guide

Following guide will help you to recover the functionality should there be any malfunction occurs:

1. Failure To Start

Check the operating voltage. The pumps are designed to start at $\pm 10\%$ operating voltage (loaded) at 5°C . However, if exceeded the maximum voltage, switch malfunction may occur.

2. Oil leakage

(a) Ensure the oil is not a spillage from vacuum pump, etc.

(b) If leakage exists, the housing gasket or the shaft seal may need to be replaced. If leakage exists in the area of the oil drain plug, you may need to reseal the plug using a commercial pipe thread sealer.

3. Failure To Attain A Good Vacuum

(a) Ensure the vacuum gauge and all connections are in good condition and leakfree. You can confirm leakage by monitoring the vacuum with a thermistor gauge while applying vacuum pump oil at connections or suspected leak points. The vacuum will improve briefly while the oil is sealing the leak.

(b) Ensure the pump oil is clean. A badly contaminated pump may require several oil flushes.

Vacuum Pump

(c) Ensure the oil is at the proper level. For optimum pump operation, the oil must be even with the Oil Level line on the sight glass when the pump is running. Do not overfill as operating temperatures will cause the oil to expand, which will appear at a higher level than when the pump is not running. To check the oil level, start the pump with the inlet covered. Check the oil level in the sight glass. Add oil if necessary.

V. Technical Parameter

1 Stage vacuum pump

Model		A-i120-R32	A-i140-R32	A-i160-R32	A-i180-R32
Flow Rate	50Hz	1.8 CFM	3.5 CFM	5.0 CFM	7.0 CFM
		51 L/min	100 L/min	142 L/min	198 L/min
	60Hz	2.0 CFM	4.0 CFM	6.0CFM	8.0 CFM
		57 L/min	113 L/min	170 L/min	227 L/min
Ultimate Vacuum	partial pressure	1Pa	1Pa	1Pa	1Pa
	total pressure	75mircons	75mircons	75mircons	75mircons
Power		1/3HP	1/2 HP	1/2 HP	3/4 HP
Inlet Port		1/4"×3/8SAE	1/4"×3/8SAE	1/4"×3/8SAE	1/4"×3/8SAE
Oil Capacity		230ml	230ml	350ml	320ml
Dimensions		240x93x200mm	320x125x232mm	340x132x245mm	360x132x245mm
Weight		5.0kg	8.0kg	11.0kg	13.5kg

2 Stage vacuum pump

Model		A-i220-R32	A-i240-R32	A-i260-R32	A-i280-R32	A-i2200-R32
Flow Rate	50Hz	1.8 CFM	3.5 CFM	5.0 CFM	7.0 CFM	10 CFM
		51 L/min	100 L/min	142 L/min	198 L/min	283 L/min
	60Hz	2.0 CFM	4.0 CFM	6.0CFM	8.0 CFM	12 CFM
		57 L/min	113 L/min	170 L/min	227 L/min	340 L/min
Ultimate Vacuum	partial pressure	2×10 ⁻¹ Pa	2×10 ⁻¹ Pa	2×10 ⁻¹ Pa	2×10 ⁻¹ Pa	2×10 ⁻¹ Pa
	total pressure	7.5mircons	7.5mircons	7.5mircons	7.5mircons	7.5mircons
Power		1/2 HP	1/2 HP	3/4 HP	1 HP	1 HP
Inlet Port		1/4" SAE	1/4" SAE	1/4" SAE	1/4" SAE	1/4" SAE
Oil Capacity		350 ml	600 ml	500 ml	600 ml	550 ml
Dimensions		320×125×232mm	340×132×245mm	360x132x245 mm	390x145x252 mm	390x145x252 mm
Weight		8.5kg	11 kg	13.5 kg	15 kg	17 kg

Vacuum Pump

1 Stage vacuum pump

Model		A-i120	A-i140	A-i160	A-i180
Flow Rate	50Hz	1.8 CFM	3.5 CFM	5.0 CFM	7.0 CFM
		51 L/min	100 L/min	142 L/min	198 L/min
	60Hz	2.0 CFM	4.0 CFM	6.0CFM	8.0 CFM
		57 L/min	113 L/min	170 L/min	227 L/min
Ultimate Vacuum	partial pressure	1Pa	1Pa	1Pa	1Pa
	total pressure	75mircons	75mircons	75mircons	75mircons
Power		1/3HP	1/2 HP	1/2 HP	3/4 HP
Inlet Port		1/4" & 3/8SAE	1/4" & 3/8SAE	1/4" & 3/8SAE	1/4" & 3/8SAE
Oil Capacity		230ml	230ml	350ml	320ml
Dimensions		240x93x200mm	320x125x232mm	340x132x245mm	360x132x245mm
Weight		5.0kg	8.0kg	11.0kg	13.5kg

2 Stage vacuum pump

Model		A-i220	A-i240	A-i260	A-i280	A-i2200
Flow Rate	50Hz	1.8 CFM	3.5 CFM	5.0 CFM	7.0 CFM	10 CFM
		51 L/min	100 L/min	142 L/min	198 L/min	283 L/min
	60Hz	2.0 CFM	4.0 CFM	6.0CFM	8.0 CFM	12 CFM
		57 L/min	113 L/min	170 L/min	227 L/min	340 L/min
Ultimate Vacuum	partial pressure	2x10 ⁻¹ Pa	2x10 ⁻¹ Pa	2x10 ⁻¹ Pa	2x10 ⁻¹ Pa	2x10 ⁻¹ Pa
	total pressure	7.5mircons	7.5mircons	7.5mircons	7.5mircons	7.5mircons
Power		1/2 HP	1/2 HP	3/4 HP	1 HP	1 HP
Inlet Port		1/4" SAE	1/4" SAE	1/4" SAE	1/4" SAE	1/4" SAE
Oil Capacity		350 ml	600 ml	500 ml	600 ml	550 ml
Dimensions		320x125x232mm	340x132x245mm	360x132x245 mm	390x145x252 mm	390x145x252 mm
Weight		8.5kg	11 kg	13.5 kg	15 kg	17 kg

1 Stage vacuum pump

Model		VP115N	VP130N	VP140N	VP170N	VP190N
Flow Rate	50Hz	1.8 CFM	2.5 CFM	3.5 CFM	6.0 CFM	8.0 CFM
		51 L/min	71 L/min	100 L/min	170 L/min	227 L/min
	60Hz	2.0 CFM	3.0 CFM	4.0 CFM	7.0 CFM	9.0 CFM
		57 L/min	85 L/min	115 L/min	198 L/min	255 L/min
Ultimate Vacuum	partial pressure	2 Pa	2 Pa	2 Pa	2 Pa	2 Pa
	total pressure	150 microns	150 microns	150 microns	150 microns	150 microns
Power		1/4 HP	1/4 HP	1/3 HP	3/4 HP	3/4 HP
Inlet Port		1/4" SAE	1/4" SAE	1/4" & 3/8" SAE	1/4" & 3/8" SAE	1/4" & 3/8" SAE
Oil Capacity		240 ml	230 ml	330 ml	280 ml	320 ml
Dimensions		240x93x200mm	240x93x200mm	280x115x230mm	320x125x232 mm	340x132x245mm
Weight		4.0 kg	4.3 kg	7.0 kg	8.5 kg	12.0 kg

Vacuum Pump

2 Stage vacuum pump

Model		VP215N	VP230N	VP250N
Flow Rate	50Hz	1.8CFM	2.5CFM	4.5 CFM
		51 L/min	71 L/min	128 L/min
	60Hz	2.0 CFM	3.0 CFM	5.0 CFM
		57 L/min	85 L/min	142 L/min
Ultimate Vacuum	partial pressure	2×10^{-1} Pa	2×10^{-1} Pa	2×10^{-1} Pa
	total pressure	15 microns	15 microns	15 microns
Power		1.4/HP	1/3 HP	1/2 HP
Inlet Port		1/4"SAE	1/4"&3/8"SAE	1/4"&3/8"SAE
Oil Capacity		230 ml	300 ml	350 ml
Dimensions		240x93x200 mm	280x115x230 mm	320x125x232 mm
Weight		4.3 kg	7.8 kg	8.6 kg


Model		VP270N	VP290N	VP2200N
Flow Rate	50Hz	6.0 CFM	8.0 CFM	10 CFM
		170 L/min	227 L/min	283 L/min
	60Hz	7.0CFM	9.0 CFM	12 CFM
		198 L/min	255 L/min	340 L/min
Ultimate Vacuum	partial pressure	2×10^{-1} Pa	2×10^{-1} Pa	2×10^{-1} Pa
	total pressure	15 microns	15 microns	15 microns
Power		3/4 HP	1 HP	1 HP
Inlet Port		1/4"&3/8"SAE	1/4"&3/8"SAE	1/4"&3/8"SAE
Oil Capacity		450 ml	630 ml	630 ml
Dimensions		340x132x245 mm	390x145x252 mm	390x145x252 mm
Weight		12.5 kg	15.5 kg	16 kg

Vacuum Pump

VI. Dual Voltage & Dual Frequency Series

Outlook Structure

Use below outlook drawing for better understanding of Dual Voltage & Dual Frequency Series

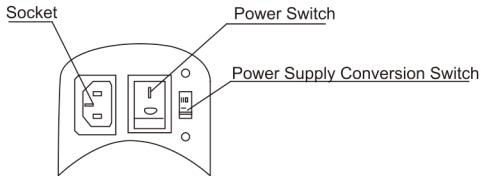

Note:

1. This product operates in ambient temperature: $5^{\circ}\text{C}\sim 40^{\circ}\text{C}$
2. Power Supply of the products are 110-127V 50/60Hz
220-240V 50/60Hz

Check power supply parameter before using the vacuum pump and ensure the Power Supply Conversion Switch is set at the right place: 110V or 220V .

3. This product is equipped with Thermal Protection function:

If the ambient temperature is too hot or the voltage is too high, the product may stop functioning. It is recommended not to switch off the power supply immediately.

If the product re-start up automatically after 3 minutes, it is recommended to cool the product by lowering the ambient temperature or power supply voltage to prolong the lifespan of the vacuum pump.

Solution For HVAC/R Industry Design For Performance



Vacuum Pump



Refrigerant
Recovery Unit



Charging Scale



Vacuum Gauge



Leak Detector



Manifold Gauge



Flaring Tool



Tube Cutter

ZEROVAKUM POMPA VE VAKUM SİSTEMLERİ

TEL: +90 212 656 29 08 MOBİL: 0552 556 97 24

E-POSTA: info@zerovakum.com.tr

WEB SİTE: www.zerovakum.com.tr